



WorkCentre 5645/5655 Online Support

Solution Read the Meters (Billing Counters) on the Control Panel

1. Press the [Machine Status] button on the Control Panel. The Machine Status screen will be displayed.



2. The Total Impressions counter will be displayed at the bottom left corner of the screen and is the counter used to submit a meter read. The 56xx nine digit serial number is above.