



WorkCentre 5645/5655 Online Support

Solution Replace the Fuser Module and the Ozone Filter


.NOTE: An Ozone Filter is also packaged with the Fuser Module. The Ozone Filter must also be replaced at the same time.

WARNING: The Fuser Module may be hot! Use caution when working in this area. Use the handle provided on the Top Cover to avoid any contact with hot surfaces during the removal or replacement procedures.

1. Open the Front Door.



2. Rotate the orange locking lever upward to release the Fuser Module.

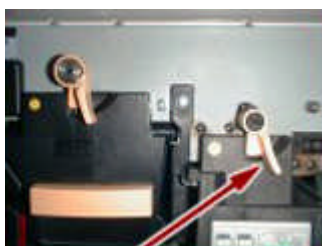

3. Pull up on the orange handle and pull the Fuser Module part way out of the machine. Grasp the handle on top of the module to support the weight, and then remove the module from the machine.



4. Dispose of the old Fuser Module according to the instructions included with the new module.
5. Remove the new Fuser Module from its box.

6. Grasp the handle on top of the module and push it into the machine.
7. Rotate the orange locking lever downward to lock the Fuser Module into position.
8. Close the Front Door. If the Front Door does not close, make sure that the Fuser Module is positioned and latched correctly.

To replace the Ozone Filter:

NOTE: The following steps confirm that the Ozone Filter has been changed and resets the counter used to determine the lifespan of the Ozone Filter.

1. Open the Access Door on the top, left side of the machine, toward the rear.



2. Remove the used Ozone Filter and dispose of the filter as normal office waste.



3. Remove the new Ozone Filter from its box.
4. Install the new filter in the machine.
5. Close the Access Door. A 'Have you replaced the Ozone Filter?' message will be displayed on the Touch Screen.
6. Select the [Yes] button on the Touch Screen.
7. Select the [Close] button.